

# INSTALLATION, OPERATION AND MAINTENANCE MANUAL

## GF Series Flowmeter Models GF90/GF92

Doc. No. 06EN003229

Rev. C

Software Version 4.0X, 4.1X

U.S. Patent Number 4,994,780

---

### Notice of Proprietary Rights

---

This document contains confidential technical data, including trade secrets and proprietary information which are the property of Fluid Components Intl (FCI).

Disclosure of this data to you is expressly conditioned upon your assent that its use is limited to use within your company only (and does not include manufacture or processing uses). Any other use is strictly prohibited without the prior written consent of FCI.

---

*© Copyright 1996 Fluid Components Intl  
a limited liability company  
All Rights Reserved*

REV. N/C 12/7/93  
REV. A 4/11/95  
REV. B 12/12/96  
REV. C 10/09/96



## CUSTOMER COMMITMENT PLEDGE

We will work closely with our customers to provide the best products and service

- at a competitive value
- on time
- with unquestioned support

in full compliance with our *COMPLETE CUSTOMER COMMITMENT*.

## COMMITMENT TO QUALITY

In keeping with the overall commitment of management and employees of Fluid Components Intl to Total Quality Management, the Technical Publications Department expresses its pledge and mission to you, our customer:

*“To support the creation and publication of world-class technical material which is technically accurate and practical, concise and user-friendly, attractive and professional in appearance, and consistent in form, format, content, and style.”*

## QUALITY IMPROVEMENT

We appreciate your comments and suggestions which support our effort to constantly improve our product and services. Please address comments and suggestions to your nearest field representative or in-house technical support representative. Thank you.

FCI TECHNICAL PUBLICATIONS DEPARTMENT

## **CUSTOMER SERVICE/TECHNICAL SUPPORT**

FCI provides full in-house technical support for our products 7 a.m. to 5 p.m. PST, Monday through Friday (excluding holidays and an annual plant closure between Christmas and New Year's day). Also, additional technical representation is provided by FCI field representatives. Before contacting one of our field or in-house representatives, please ensure that you have performed the troubleshooting techniques outlined in this document.

### ***By Mail***

Fluid Components Intl  
1755 La Costa Meadows Dr.  
San Marcos, CA 92069  
Attn: Customer Service Department

### ***By Phone***

Contact the FCI regional representative in your area. If you are unable to contact the field representative or are unable to satisfactorily resolve the situation, contact the FCI Customer Service Department toll free at 1 (800) 854-1993.

### ***By Fax***

To describe your problems in a more graphic or pictorial manner, send your regional representative a fax. The fax should include your phone and fax number. Again FCI is available through facsimile if you have exhausted your possibilities with the authorized factory representative. Our fax number is (619) 736-6250; it is available 7 days a week, 24 hours a day.

### ***International support***

For product information or product support outside the contiguous United States, Alaska, or Hawaii, contact your country's FCI International Representative or the one nearest to you. See list on following pages.

Appendix C contains a detailed explanation of the FCI customer service policy on returns, adjustments, in-field or factory repair, in- or out-of-warranty.

Reserved for Domestic Rep Map

Reserved for International Rep Map

# REVISIONS

REV.	DESCRIPTION	DATE	AUTHOR
A	Reformatted manual using new publishing program. There are minor differences in how the pages appear. There are changes in terminology for clarification purposes along with other modifications to the text and illustrations. Due to the number of changes no change bars will appear.	4/10/95	R. Sanders
B	Incorporated Errata 17EN00015. Incorporated changes for the software upgrade. Added remarks for ESD protection. Added CE mark information in Chapter 1. Added Appendix D to include CE information. Change Bars will not appear due to the number of changes.	4/10/95	R. Sanders
C	Removed and replaced Appendix C, Customer Service. See change bars for changes.	10/10/96	R. Sanders

# Contents

## Chapter 1 - General Information

Description .....	1-1
Flow Element .....	1-1
Flow Transmitter .....	1-1
Theory of Operation .....	1-2
Technical Specifications .....	1-2
Flow Transmitter .....	1-2
Signal Output .....	1-2
Operating Characteristics - Flow Element Assembly .....	1-3

## Chapter 2 - Installation

Receiving/Inspection .....	2-1
Packing/Shipping>Returns .....	2-1
Factory Calibration Note .....	2-1
Pre-Installation Procedure .....	2-1
Use Standard ESD Precautions .....	2-1
Prepare or Verify Flow Element Location .....	2-1
Verify Serial Numbers .....	2-2
Verify Dimensions .....	2-2
Verify Flow Direction for Flow Element Orientation and Placement .....	2-2
Install GF90 Flow Element .....	2-3
GF90 Flange Mount .....	2-3
GF90 NPT Pipe Thread Mount .....	2-3
GF90 Adjustable or Retractable Flow Element Assembly .....	2-4
GF90 2 Inch Pipe Mount .....	2-4
Install GF92 Flow Element .....	2-5
GF92 In-Line Body Length Verification .....	2-5
GF92 Flange Mount .....	2-5
GF92 NPT Pipe Thread Installation .....	2-6
Install Transmitter .....	2-7
Remote Hardware .....	2-7
Power Connection Information .....	2-7
Minimum Wire Size .....	2-7
Input Power .....	2-8
Local Transmitter .....	2-8
Remote Transmitter .....	2-8
Customer Wiring .....	2-11
LT81 Series Upgrade Information .....	2-11
Isolated Output Option and 4-20 mA Adjustment .....	2-11
Installation Quick-Check List .....	2-12

## Chapter 3 - Operation

Introduction .....	3-1
Start-Up Procedure .....	3-1
Operation .....	3-1
Display .....	3-1
Initialization Window .....	3-1
Normal Mode Window .....	3-1
Menu Window .....	3-2
Other Window Types .....	3-3
Menu Control .....	3-3
Menu Organization .....	3-4
Normal Operation .....	3-4
Quick Operation Procedure .....	3-6
Configuring the Flowmeter .....	3-8

Selecting Units of Measure .....	3 - 8
Setting Analog Outputs .....	3 - 11
Setting the Relays .....	3 - 12
Testing the Relays .....	3 - 13
Checking the Current Setup .....	3 - 13
Advanced Features .....	3 - 15
Flow Rate Correction Equation .....	3 - 15
The Auxiliary Input .....	3 - 17
Serial Communications .....	3 - 19
Multiple Groups .....	3 - 21
Switching Groups Through the Key Pad .....	3 - 22
Switching Groups Through the Serial Port .....	3 - 22
Switching Groups by Temperature - Auto-Selecting .....	3 - 22
Switching Groups by the Auxiliary Input - Auto-Selecting .....	3 - 23
Link Groups .....	3 - 24
Calibration Functions, Menu 7.0 .....	3 - 25

## Chapter 4 - Maintenance

Introduction .....	4 - 1
Maintenance .....	4 - 1
Calibration .....	4 - 1
Electrical Connections .....	4 - 1
Enclosures .....	4 - 1
Electrical Cables .....	4 - 1
Flow Element Mounting Connections .....	4 - 1
Flow Element Assembly .....	4 - 1

## Chapter 5 - Troubleshooting

Introduction .....	5 - 1
Troubleshooting Equipment .....	5 - 1
Quick Troubleshooting .....	5 - 1
In-Depth Troubleshooting - The Flow Element .....	5 - 2
Check Serial Numbers .....	5 - 2
Check the Resistance of the Flow Element .....	5 - 2
In-Depth Troubleshooting - The Flow Transmitter .....	5 - 3
Check the Voltages Across the RID Leads .....	5 - 3
Verify the Calibration Parameters .....	5 - 4
In-Depth Troubleshooting - The Installation .....	5 - 4
Verify Proper Orientation .....	5 - 4
Verify Proper Insertion Depth .....	5 - 4
In-Depth Troubleshooting - The Process .....	5 - 4
Verify Standard versus Actual Process Conditions .....	5 - 4
Swirling Flow and the Length of the Meter Section .....	5 - 5
Condensation, Pulsing Flow or Transient Flow .....	5 - 5
Natural Convection in Vertical Pipes and Ducts .....	5 - 5
Other Troubleshooting .....	5 - 5
The Relays .....	5 - 5
Verifying Delta R's .....	5 - 6
Repair .....	5 - 7
Defective Parts .....	5 - 7
Spares .....	5 - 7
Storage Information .....	5 - 8
Customer Service .....	5 - 8

**Appendix A - Drawings**

Outline Drawings ..... A - 1

**Appendix B - Glossary**

Abbreviations and Explanation of Terms ..... B - 1

**Appendix C - Customer Service**

Policy and Prodedures ..... C - 1

**Appendix D - CE Mark Conformance**

CE Mark Conformance Information ..... D - 1

**Tables**

2-1 Interconnecting Cable Size ..... 2 - 8  
 2-2 Customer Wiring ..... 2 - 11  
 3-1 Key Assignments for the GF Series Key Pad ..... 3 - 3  
 3-2 Menu Functions ..... 3 - 4  
 3-3 Quick Operation Procedure ..... 3 - 6  
 3-4 Flow Rate Units of Measure ..... 3 - 9  
 3-5 Typical Signal Output Configuration ..... 3 - 11  
 5-1 Quick Check Troubleshooting ..... 5 - 1  
 5-2 Resistances at JP3 Terminal Plug ..... 5 - 2  
 5-3 Resistance at Flow Element Enclosure Terminal Block ..... 5 - 3  
 5-4 Voltage Readings in Volts DC at JP3 ..... 5 - 3

**Figures**

1-1 Flow Element Cut-Away View ..... 1 - 1  
 2-1 Flange Mount Showing Flat Area, Flow Arrow and Proper U-Length ..... 2 - 2  
 2-2 NPT Pipe Thread Mount ..... 2 - 3  
 2-3 2 Inch Pipe Mount ..... 2 - 4  
 2-4 Correct Orientation ..... 2 - 5  
 2-5 Flange Connections ..... 2 - 5  
 2-6 NPT Connections ..... 2 - 6  
 2-7 Wiring Diagram - Local ..... 2 - 9  
 2-8 Wiring Diagram - Remote ..... 2 - 10  
 2-9 Isolator Output Module ..... 2 - 12  
 2-10 Local Wiring Diagram, Isolated Output Option ..... 2 - 13  
 2-11 Remote Wiring Diagram, Isolated Output Option ..... 2 - 14  
 3-1 Initialization Window ..... 3 - 1  
 3-2 Normal Operation Display ..... 3 - 2  
 3-3 Menu Window ..... 3 - 2  
 3-4 Non-Scrolling Menu Window ..... 3 - 3  
 3-5 Key Pad ..... 3 - 3  
 3-6 Menu Structure ..... 3 - 5  
 3-7 Signal Output Versus Flow Rate ..... 3 - 11  
 3-8 Relay Switch Point Schemes ..... 3 - 12  
 3-9 Flow and Area Verification Display ..... 3 - 14  
 3-10 Temperature, Totalizer Verification Display ..... 3 - 14  
 3-11 Analog Output Verification ..... 3 - 14  
 3-12 Relay Status Verification Display ..... 3 - 15  
 3-13 Correction Factor ..... 3 - 16  
 3-14 Desired Flow Rate Versus Measured Flow Rate ..... 3 - 16  
 3-15 Auxiliary Input Wiring Diagram ..... 3 - 17

3-16	Auxiliary Input Process .....	3 - 18
3-17	Wiring Diagram, DB-9 and DB25 PC Connectors .....	3 - 19
3-18	Series Serial Communication Code Example .....	3 - 20
3-19	Auto-Select by Temperature Application .....	3 - 23
3-20	Auto-Select, External Signal Application .....	3 - 23
3-21	Auto-Select, Switch Point Scheme .....	3 - 24
5-1	JP3 Terminal Plug .....	5 - 2
5-2	Flow Element Enclosure Terminal Block .....	5 - 3
5-3	Decade Box Connections .....	5 - 6
A-1	GF90 1 or 1/4 Inch NPT Flow Element .....	A - 1
A-2	GF90 Flanged Flow Element .....	A - 1
A-3	GF90 1-1/4 Inch NPT Low Pressure Packing Gland Flow Element .....	A - 1
A-4	GF90 Flanged Low Pressure Packing Gland Flow Element .....	A - 2
A-5	GF90 1-1/4 Inch Medium Pressure Packing Gland Flow Element .....	A - 2
A-6	GF90 Flanged Medium Pressure Packing Gland Flow Element .....	A - 2
A-7	GF92 NPT and Flanged Flow Element Configurations .....	A - 3
A-8	GF90 and GF92 Pigtail Configuration .....	A - 4
A-9	Local Enclosure NEMA Type 4X and 7 Hazardous Location .....	A - 4
A-10	Local Enclosure NEMA Type 4X .....	A - 4
A-11	Remote Enclosure NEMA Type 4X .....	A - 5
A-12	Remote Enclosure NEMA Type 7 .....	A - 5
A-13	Flow Transmitter Configuration With Panel Assembly .....	A - 5
A-14	LT Series Upgrade .....	A - 6

# Symbols

The following symbols are used throughout the manual to draw attention to items or procedures that require special notice or care.



**Warning:** Warns of possible **personal danger** to those handling the equipment.



**Caution:** Cautions against possible **equipment damage**.



**Note:** Contains important information.